


User's Manual

DIGITAL SNAKE SYSTEM



Important Safety Instructions

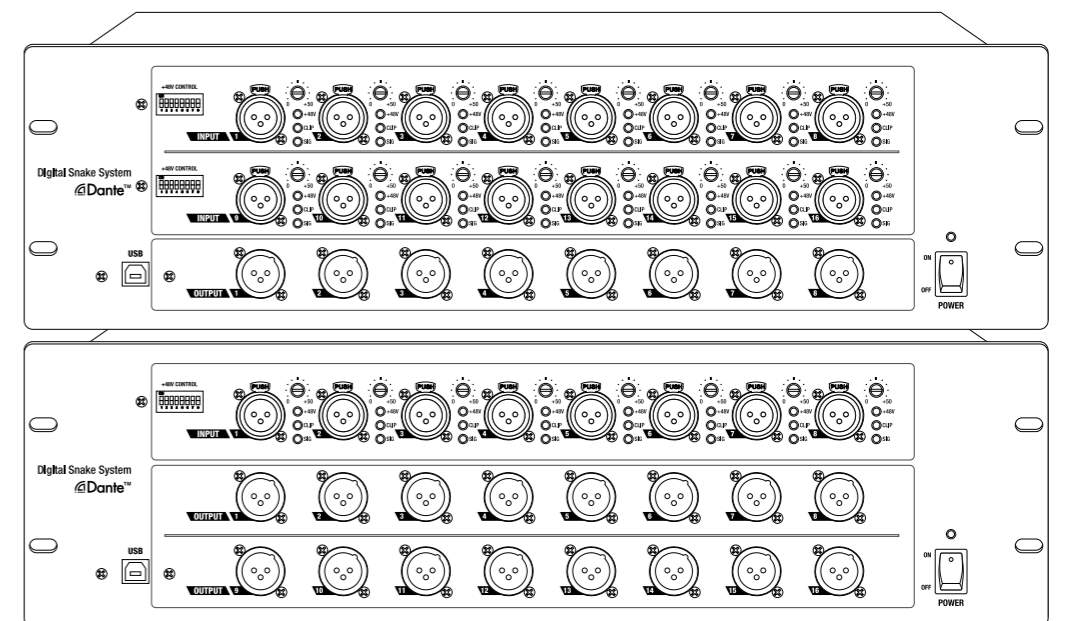

TO REDUCE THE RISK OF ELECTRIC SHOCK PLEASE DO NOT REMOVE THE COVER OR THE BACK PANEL OF THIS EQUIPMENT. THERE ARE NO PARTS NEEDED BY USER INSIDE THE EQUIPMENT. FOR SERVICE, PLEASE CONTACT QUALIFIED SERVICE CENTERS.

- This symbol, wherever used, alerts you to the presence of un-insulated and dangerous voltages in the product enclosure. These are voltages that may be sufficient to constitute the risk of electric shock or death.
- This symbol, wherever used, alerts you to important operating and maintenance instructions. Please read.
- Protective Ground Terminal
- AC mains (Alternating Current)
- Hazardous Live Terminal
- ON: Denotes the product is turned on.
- OFF: Denotes the product is turned off.

CAUTION
Describes precautions that should be observed to prevent damage to the product.

1. Read this Manual carefully before operation.
2. Keep this Manual in a safe place.
3. Be aware of all warnings reported with this symbol.
4. Keep this Equipment away from water and moisture.
5. Clean it only with dry cloth. Do not use solvent or other chemicals.
6. Do not damp or cover any cooling opening. Install the equipment only in accordance with the Manufacturer's instructions.
7. Power Cords are designed for your safety. Do not remove Ground connections! If the plug does not fit your AC outlet, seek advice from a qualified electrician. Protect the power cord and plug from any physical stress to avoid risk of electric shock. Do not place heavy objects on the power. This could cause electric shock or fire.
8. Unplug this equipment when unused for long periods of time or during a storm.
9. Refer all service to qualified service personnel only. Do not perform any servicing other than those instructions contained within the User's Manual.
10. To prevent fire and damage to the product, use only the recommended fuse type as indicated in this manual. Do not short-circuit the fuse holder.

WARNING
To reduce the risk of electric shock and fire, do not expose this equipment to moisture or rain.

Dispose of this product should not be placed in municipal waste and should be separate collection.

Before replacing the fuse, make sure that the product is OFF and disconnected from the AC outlet.

11. Move this Equipment only with a cart, stand, tripod, or bracket, specified by the manufacturer, or sold with the Equipment. When a cart is used, use caution when moving the cart / equipment combination to avoid possible injury from tip-over.

12. Permanent hearing loss may be caused by exposure to extremely high noise levels. The US. Government's Occupational Safety and Health Administration (OSHA) has specified the permissible exposure to noise level. These are shown in the following chart:

Hours x day	SPL	Example
8	90	Small gig
6	92	Train
4	95	Subway train
3	97	High level desktop monitors
2	100	Classic music concert
1.5	102	
1	105	
0.5	110	
0.25 or less	115	Rock Concert

According to OSHA, an exposure to high SPL in excess of these limits may result in the loss of heat. To avoid the potential damage of heat, it is recommended that Personnel exposed to equipment capable of generating high SPL use hearing protection while such equipment is under operation.

The apparatus shall be connected to a mains socket outlet with a protective earthing connection.

The mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Troubleshooting

Problem	Possible Cause	Suggested Solution
Power light doesn't on after the device powered on	The power outlet or power strip is not working	Try a different outlet or power strip
	Power cord is malfunctioning	Replace the DSS power cord
Ethernet green LED does not work after plugging a DSS to a router	The router isn't powered on	Power on the router
	The Ethernet cable is broken	Try a different cable
	The port on the router not work	Try plugging the cable into a different port on the router
The DSS can not be controlled by the DSS discovery software	There is no Network Interface Card (NIC) used to connect to the CobraNet network	Select the card to serve as the network adapter used in the discovery process from the Network Adapter.
The green LED of Ethernet port lights on but without output	No signal route to the transmitter	Make sure the transmitter inputs signal
	The output channel of the receiver is not assigned signal	Make sure the output channel of the receiver has assigned signal
	The transmitter's Tx bundle number and receiver's Rx bundle number are different	Make sure the bundle numbers of them are the same
	The Subcount number is less than the channel number of the receiver which you are using	Set the Subcount number no less than the channel number which you want to use
	The value of modeRateControl for the receiver and transmitter are different	Make sure the values of mode Rate Control of the receiver and transmitter are the same

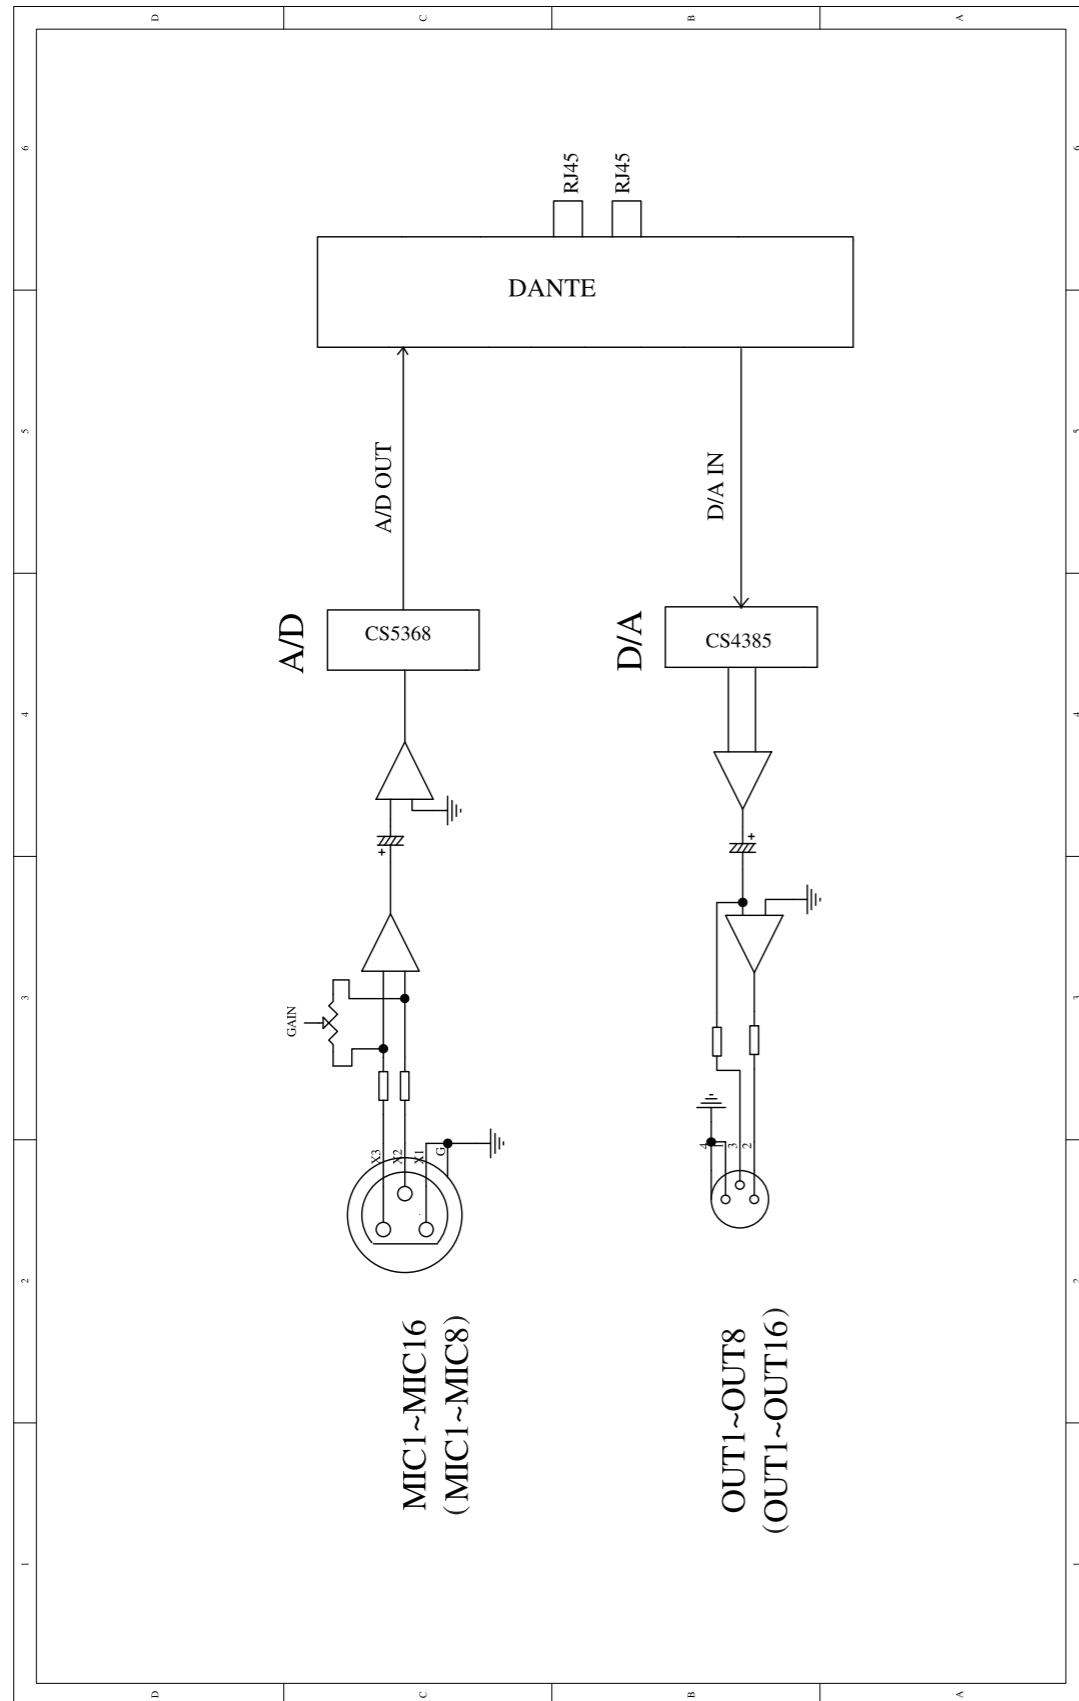


Table of Contents

1. INTRODUCTION	4
2. FEATURES	4
3. USEFULL DATA	4
4. CONTROLS	5
5. APPLICATION	7
6. HARDWARE REQUIREMENTS	12
7. TECHNICAL INFORMATION	13
8. BLOCK DIAGRAM	14
9. TROUBLESHOOTING	15

These products are for professional use. They can be used in following electromagnetic environment: residential, commercial and light industrial, urban outdoors. They are intended for rack mounting. When under the EM disturbance, the ratio of signal-noise may be changed above 3dB.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

1

Introduction

Thank you for purchasing the Digital Snake System. The transmission distance of the unit reaches 100 meters using CAT 5 cable and over 1000 meters using fiber cable. It delivers uncompressed digital audio in high quality, extra low noise and real time through a standard Ethernet network. The audio transmitting setting can be set by professional software and saved in the unit for using independently which makes them more flexible and economical. All of the signals are sent through Ethernet network in digital which overcomes the disadvantage of distorting the audio which caused by sending signals in analog signal. It reduces the system installation and maintenance fee as the unit is suitable for any situation and transmits signal through Ethernet network. With the help of dip switch the users can set ID parameter easily. The unit also can be remote controlled through unit discovery software.

We suggest that you use this manual to familiarize yourself with the features, applications, and correct connection procedures for your unit before using. This will help you avoid problems during installation and setup.

We are confident that you will enjoy your unit.

2

Features

- ID setting manually
- Transmitting digital signal in real time (connected by Dante)
- Point to point and multipoint transmission
- 16 analog input 8 output channels (XLR jack)
(The other: 8 analog input 16 output channels (XLR jack))
- Level control for each input channel
- Led indicators for signal, clip and 48V phantom power input channel
- 48V phantom power
- Various connection available using Ethernet Cat 5 (e) cable
- USB port for upgrading firmware
- can be used as either transmitter or receiver

3

Usefull Data

Please write your serial number here for future reference.

Serial Number:


Date of Purchase:

Purchased at:

Technical Information

7

Digital Parts	A/D Conversion	Sample Rate	48KHz	
		Bit Rate	24bit	
		Dynamic Range	114dB	
		THD+N	-105dB	
	D/A Conversion	Sample Rate	48Hz	
		Bit Rate	24bit	
Dynamic Range		114dB		
THD+N		-100dB		
Technical Data	Sample Rate	48KHz		
	THD	<0.01%@1KHz 0dB Input		
	Frequency Response	20~20KHz@+/-1.5dB		
	Dynamic Range	108dB		
	Noise Floor	<-96dB @0dB Gain		
	Cross Talk	<-92db @0dB Gain		
	Ethernet	100Base-T CAT-5 Cable max 100M		
	Channel	16IN/8OUT XLR Jack (The other:8IN/16OUT XLR Jack)		
	Indicate	Power Switch LED		
		Signal Input LED		
		Clipping LED		
		Phantom Power LED		
	Phantom Power	Switch ON/OFF		
	Input Range	0 to 40dB @ Analog Channel		
	Input/Output	Analog XLR		
Ethernet	100Base-T RJ45 Connector			
Weight	9.46KG(The other:9KG)			
Dimension	583*390*487mm			

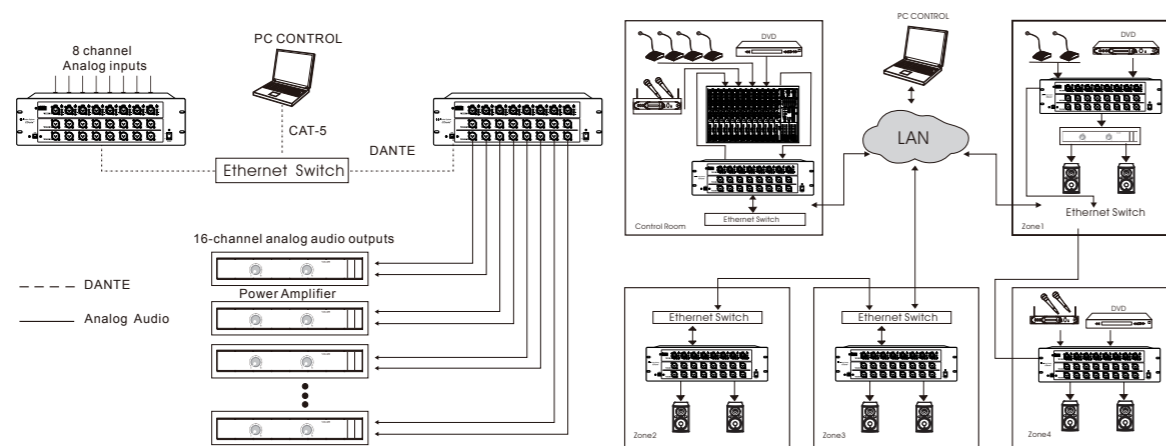

To use the DANTE Controller, the following items are required:

- You must have access to a computer running Microsoft Windows XP (Service Pack 3 or higher), Vista (Service Pack 1 or higher), or Windows 7. The computer must also have an Ethernet port, which you use to connect the computer to the DSS device via an Ethernet network through a shielded CAT 5 (e) cable. This connection is necessary for using the DANTE Controller software to load configuration information into the device and also for monitoring detailed status information. Note that some status information is visible on the hardware itself.


Minimum requirements for running DANTE Controller

- Windows XP (32-bit) or Vista SP1 (32 or 64 bit), 7 (32 or 64 bit), or 8 (32 or 64 bit)
- PC with 1.6 GHz single Core Processor
- 1 GB RAM
- 1 GB available hard disk space
- Display Resolution: 1024*768
- Ethernet adapter: 100baseT

Recommendations for Best Performance

- Windows7 (32 or 64 bit)
- PC with mid-level processor @ 2 GHZ multi-core or better (for example, Intel i3, AMD Athlon II)
- 2 GB RAM
- 2 GB available hard disk space
- Display Resolution: 1152*864
- Ethernet adapter: Gigabit

FRONT PANEL

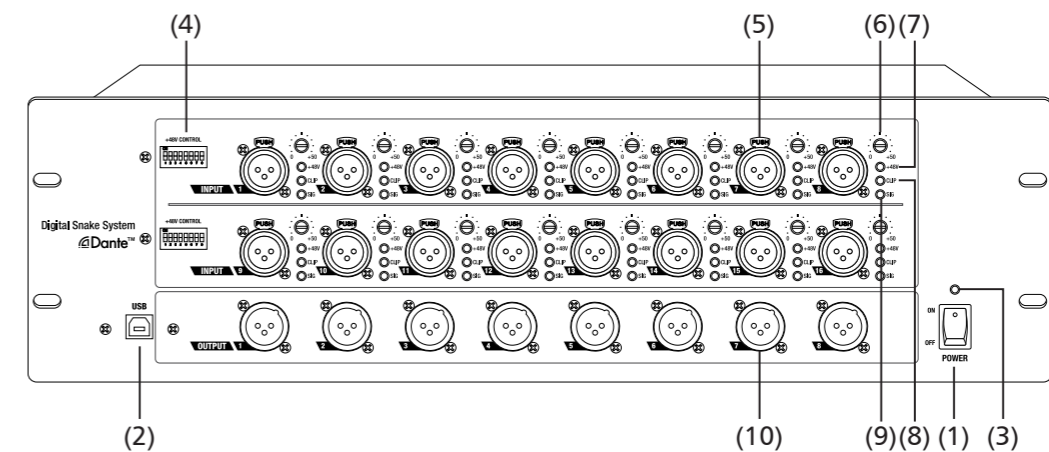

1. Power switch

Push the top part of the switch to turn on your unit. Push the bottom part of the switch to turn it off.

2. USB upgrade port

This port use to upgrade firmware.

3. Power LED

This LED indicates if the unit is power on by lighting on.

4. Phantom power switch

Turn the switch up to supply the 48V phantom power to the corresponding input channel.

5. Analog input channel

XLR jack for inputting analog signal. The PUSH table can be used to release a connecting cable.

6. Input gain control

Adjust the input gain from 0dB to +40dB.

7. Phantom power LED

This LED indicates if the 48V phantom power is supplied to the relative channel by lighting on.

8. Signal clip LED

This LED will be lighted red after the signal is $>+10\text{dB}$ to indicate the relative channel is experiencing a signal overload.


9. Signal LED

This LED indicates status of the relative channel's input signal. It will be light green slightly when the signal is $>-10\text{dB}$.

10. Analog output channel

XLR jack for outputting analog signal.

REAR PANEL

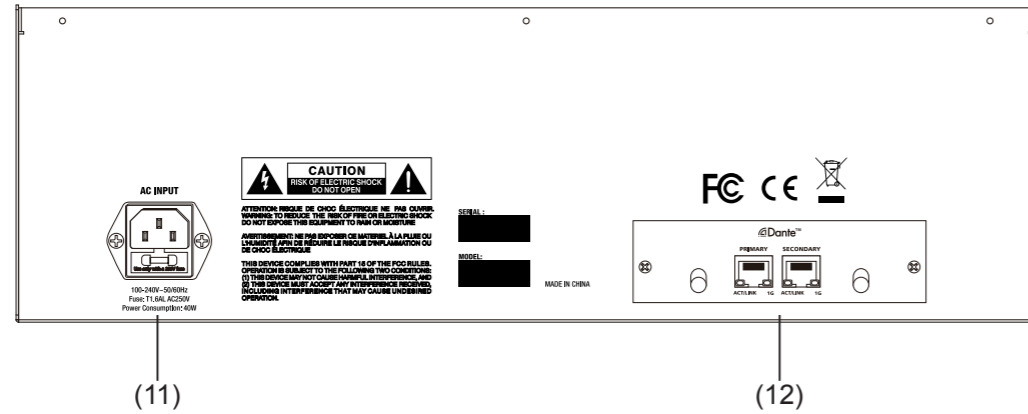

11. AC INPUT

Used for AC input.

Note: 100-240V~50/60Hz, Fuse: T1.6AL AC250V, Power consumption: 40w

12. DANTE port

There are two DANTE ports labeled "primary" and "secondary". Only the primary Ethernet port needs to be connected, but if both ports are connected they become a redundant failsafe. That is, if the primary port loses communication, the secondary port quickly takes over. Careful network design and topology which takes advantage of this feature can provide extremely high reliability in critical applications.

Each Ethernet port equips with two LEDs. The yellow LED of the Secondary Ethernet port will light to show you that the Ethernet port is able to use after power on the DSS. The green LED of the Ethernet port which connected will flash if there is data transmitting.

Application

Cat 5 is also used to carry other signals such as telephony and video. In some cases, multiple signals can be carried on a single cable; Cat 5 can carry two conventional telephone lines as well as 100BASE-TX in a single cable. The USOC/RJ-61 standard is used in multi-line telephone connections.

Various schemes exist for transporting both analog and digital video over the cable. HDBaseT is one such scheme.


Any cable that contains air spaces can breathe in moisture, especially if the cable runs between indoor and outdoor spaces. Warm moist air can cause condensation inside the colder parts of the cable outdoors. It may be necessary to take precautions such as sealing the ends of the cables. Some cables are suitable for "direct burial", but this usually requires that the cable be gel filled in order to hinder moisture migration into the cable.

When using a cable for a tower, attention must be given to vertical cable runs that may channel water into sensitive indoor equipment. This can often be solved by adding a drip-loop at the bottom of the run of cable.

Plenum-rated cables are slower to burn and produce less smoke than cables using a mantle of materials like PVC. This also affects legal requirements for a fire sprinkler system. That is if a plenum-rated cable is used, sprinkler requirement may be eliminated.

Shielded cables (FTP/STP) are useful for environments where proximity to RF equipment may introduce electromagnetic interference, and can also be used where eavesdropping likelihood should be minimized.

HOOKUP

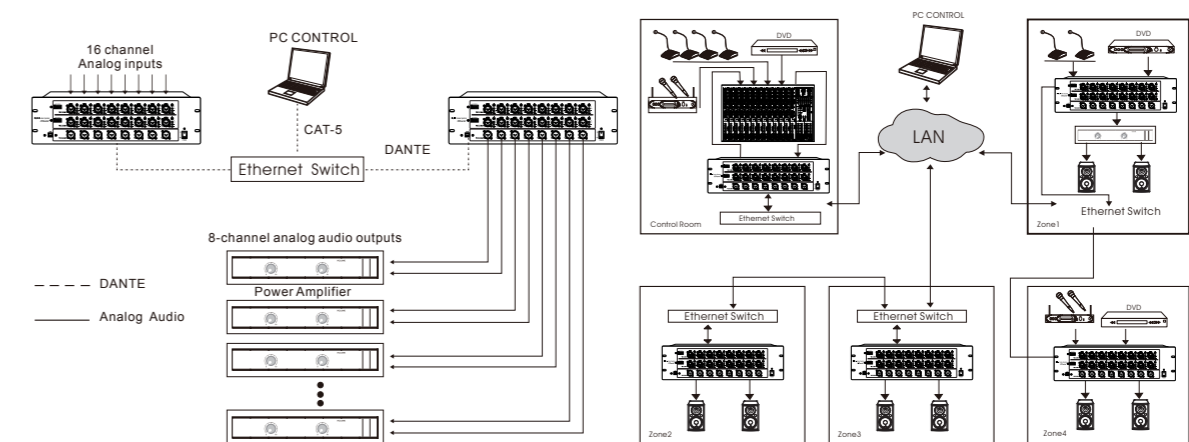

About Cat 5

Category 5 cable (Cat 5) is a twisted pair cable for carrying signals. This type of cable is used in structured cabling for computer networks such as Ethernet. The cable standard provides performance of up to 100 MHz and is suitable for 10BASE-T, 100BASE-TX (Fast Ethernet), and 1000BASE-T (Gigabit Ethernet). Cat 5 is also used to carry other signals such as telephony and video. The cable is commonly connected using punch down blocks and modular connectors. Most Category 5 cables are unshielded, relying on the twisted pair design and differential signaling for noise rejection. Category 5 has been superseded by the Category 5e (enhanced) specification.

1. Cable standard

The specification for Category 5 cable was defined in ANSI/TIA/EIA-568-A, with clarification in TSB-95. These documents specify performance characteristics and test requirements for frequencies of up to 100 MHz. Cable types, connector types and cabling topologies are defined by TIA/EIA-568-B. Nearly always, 8P8C modular connectors, often referred to as RJ45, are used for connecting category 5 cable. The cable is terminated in either the T568A scheme or the T568B scheme. The two schemes work equally well and may be mixed in an installation so long as the same scheme is used on both ends of each cable.

Each of the four pairs in a Cat 5 cable has differing precise number of twists per meter to minimize crosstalk between the pairs. Although cable assemblies containing 4 pairs are common, Category 5 is not limited to 4 pairs. Backbone applications involve using up to 100 pairs. This use of balanced lines helps preserve a high signal-to-noise ratio despite interference from both external sources and crosstalk from other pairs.

The cable is available in both stranded and solid conductor forms. The stranded form is more flexible and withstands more bending without breaking. Permanent wiring (for example, the wiring inside the wall that connects a wall socket to a central patch panel) is solid core, while patch cables (for example, the movable cable that plugs into the wall socket on one end and a computer on the other) are stranded.

2. Maximum cable segment length

According to the ANSI/TIA/EIA standard for category 5e copper cable (TIA/EIA 568-5-A), the maximum length for a cable segment is 100 meters (330 ft). If longer runs are required, the use of active hardware such as a repeater or switch is necessary. The specifications for 10BASE-T networking specify a 100 meter length between active devices. This allows for 90 meters of solid-core permanent wiring, two connectors and two stranded patch cables of 5 meters, one at each end

3. Category 5 vs. 5e

The category 5e specification improves upon the category 5 specification by tightening some crosstalk specifications and introducing new crosstalk specifications that were not present in the original category 5 specification. The bandwidth of category 5 and 5e is the same - 100 MHz.

4. Applications

This type of cable is used in structured cabling for computer networks such as Ethernet over twisted pair. The cable standard provides performance of up to 100 MHz and is suitable for 10BASE-T, 100BASE-TX (Fast Ethernet), and 1000BASE-T (Gigabit Ethernet). 10BASE-T and 100BASE-TX Ethernet connections require two cable pairs. 1000BASE-T Ethernet connections require four cable pairs. Through the use of power over Ethernet, up to 25 watts of power can be carried over the cable in addition to Ethernet data.

About DANTE

This product uses the Dante digital audio network protocol to send and receive audio signals. The default configuration network audio protocol is 16 in 8 out DANTE network audio. (The other: the default configuration network audio protocol is 8 in 16 out DANTE network audio.)


Dante is a protocol developed by Audinate that is designed to deliver multichannel audio signals at various sampling and bit rates, as well as device control signals over a Gigabit Ethernet network. For information about Dante, please visit the Audinate website. <http://www.audinate.com/>

1. Firmware Upgrade


The module firmware is upgradable over the network. Firmware upgrades are performed by uploading the upgrade file via either the device web interface or via the provided firmware upgrade tool. Software and firmware version information can be obtained via the device web interface or the Dante Controller.

Please download the DANTE Firmware Update Manager from: www.seikaku.hk and install it. Then follow the instructions to update.

1). After installation, please find and double click the DANTE Firmware Update Manager on your computer.

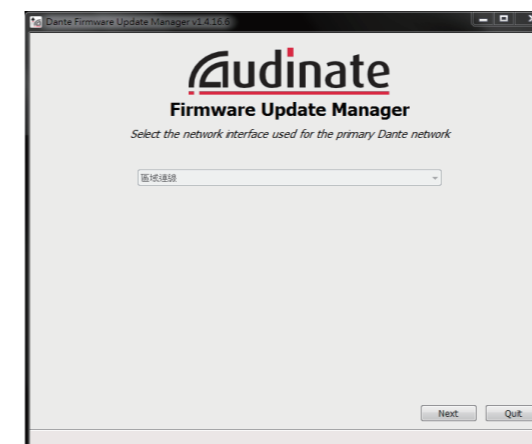


2). Click "Next" button and you can see the following interface, then click "Update Dante Firmware" button:

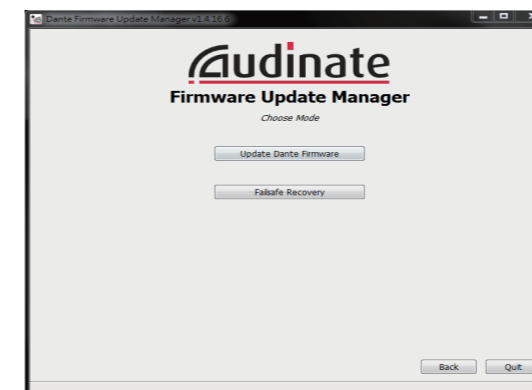


5 Application


3). Click "Browse" to find the update file path and select which you want, then go "Next":

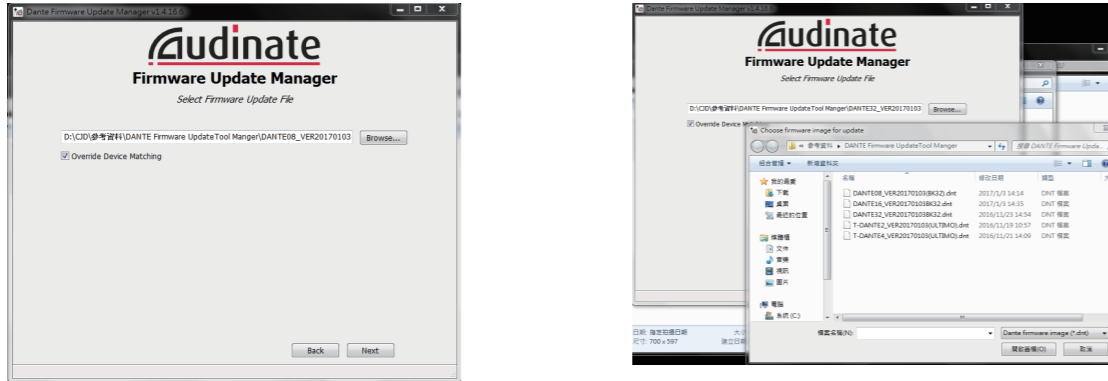

4). Select and start update:

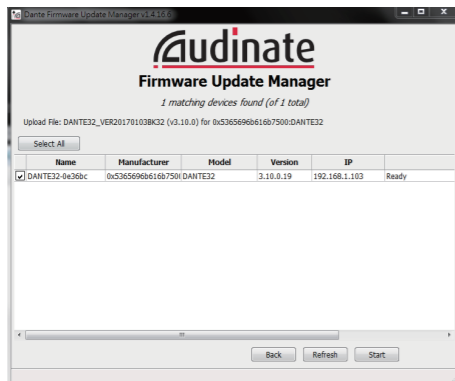


5). Shown as the following interface, click OK, and then the update is successful:

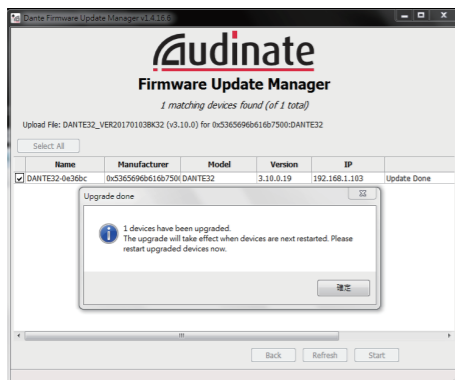

5 Application

2. DANTE Controller

Find DANTE Controller on your computer, double-click to enter the interface , click the refresh button to identify devices, or click P / S in the lower right corner, as the following interface,then choose Ethernet and click OK.

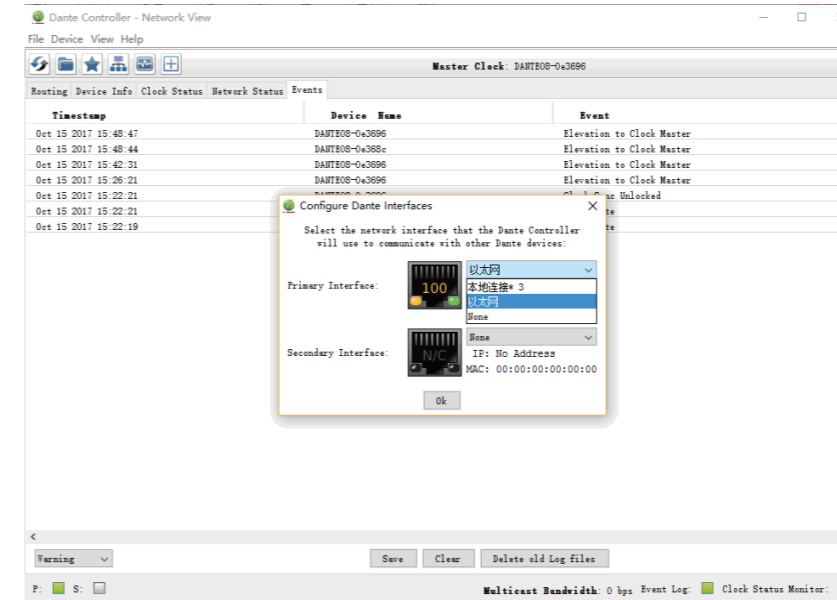

The matrix is divided into transmitter and receiver two parts. The devices (two or more) connected to the same routing appear both in the transmitter and receiver end, you can select the signal sending through the matrix.

Receiver: signal input, you can send signals to the receiver of any other device, but it is the only one sending.

